



Updating your FlipBOOK™ on the Classic Hinge

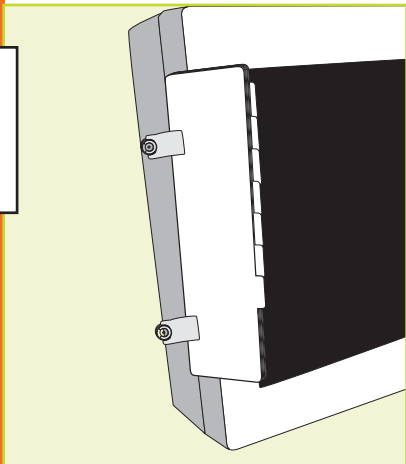

1 With the hinge attached to the monitor, open the book toward the monitor.

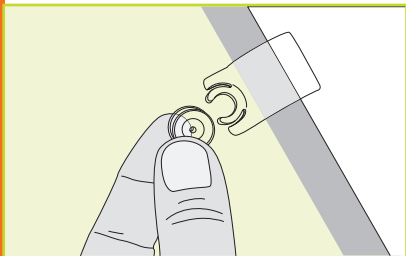

2 Then remove the two clear buttons by pulling straight out (to the left).

3 Slide the old cards off the hinge and replace them as needed.

4 Replace the two clear buttons by pushing straight in (to the right).

Updating Instructions

TEARAWAY

 FlipCARD[™]system

U.S. PATENT NO. 7,124,954

www.flipcards.com 585.713.1733