



● ● ● **FLipCARD™system**

**Update your FlipBOOK™ with
the Versa Top Lock Hinge and
Universal Mount**

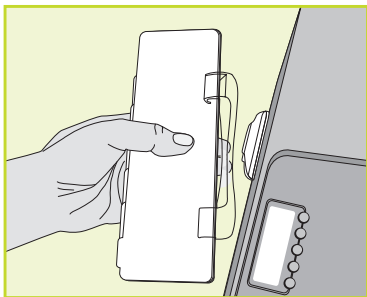


1 Unsnap the Versa Hinge from the Universal Mount.

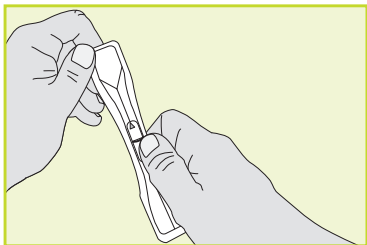


2 To unlock the Versa Hinge, slide the ribbed button away from the lock symbol and pull the hinge apart.

3 Remove, replace or add FlipCARDS™ as needed.

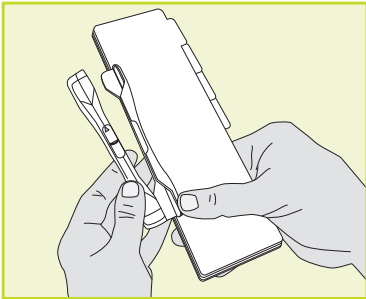

4 Snap the hinge back together and slide the ribbed button toward the lock symbol until it clicks into place.

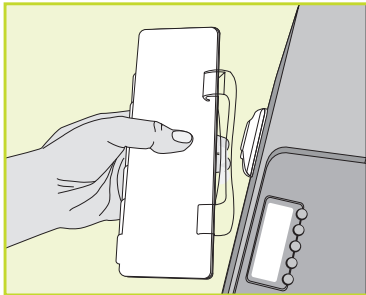

5 Snap the Versa Hinge (with the FlipBOOK attached) back into the Universal Mount.

 **FlipCARD™system**

U.S. PATENT NO. 7,441,356

www.flipcards.com 585.713.1733