



● ● ● **FLipCARD™**system

**Update your FlipBOOK™ with
the Versa Top Lock Hinge and
Swing Arm and Base**

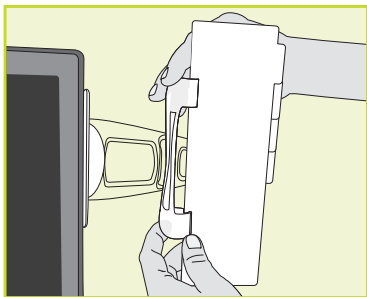


- 1** Unsnap the VersaTL Hinge from the Swing Arm and Base.

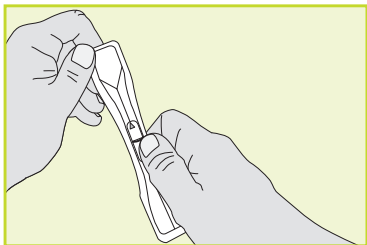


- 2** To unlock the VersaTL Hinge, slide the ribbed button away from the lock symbol and pull the hinge apart.

- 3** Remove, replace or add FlipCARDS™ as needed.

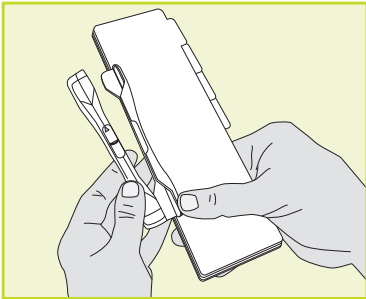

4 Snap the hinge back together and slide the ribbed button toward the lock symbol until it clicks into place.

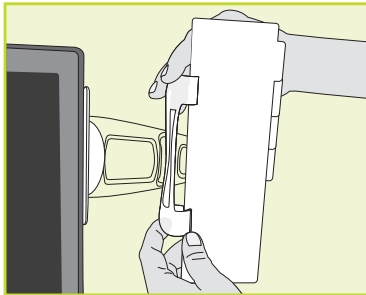

5 Snap the VersaTL Hinge (with the FlipBOOK attached) back into the Swing Arm and Base.

 **FlipCARD[™]system**

U.S. PATENT NO. 7,441,356

www.flipcards.com 585.713.1733